
lovesense-py Documentation

Release 0.1.1

The Metafetish Project

May 06, 2018

Contents

1	Lovense Protocol Explanation	3
1.1	Protocol Rules	3
1.2	Command Table	3
2	Indices and tables	5

Contents:

Lovense Protocol Explanation

Lovense toys connect via bluetooth, and then use the Serial Port Profile (SPP) to communicate with the host. This means that the toys are exposed as either COM Ports (windows) or tty devices (posix/bsd/etc).

1.1 Protocol Rules

- Commands and replies are strings, using semicolons to mark their end.
- All commands start with a command identifier word, then possibly either specifiers or levels, delimited by colons. e.g. “Vibrate:5;” would set vibration to 5.
- Replies are in the context of the command (i.e. sending “Battery;” will just return a number, like “85;”), but can still be colon delimited lists.

1.2 Command Table

The following is the known command table for all toys. Anything send or received over the serial port is in quotes to denote communication, but should not be sent using quotes if you are implementing your own version of this protocol. Commands with “:x” mean that the x should be replaced with a number, the range of which is mentioned in the description.

Com- mand	Description	Expected Return
“De- vice- Type;”	Returns toy type (A: Lush, B: Max, C: Nora), Firmware version, and bluetooth MAC address, as a colon delimited list	String, e.g. “C:11:0082059AD3BD;”
“Bat- tery;”	Returns battery level of toy	Number, e.g. “85;” meaning 85% battery left
“PowerOff;”	Powers the device off	“OK;”
“Sta- tus:1;”	Shows device status. 2 is “normal”	“2;”
“Start- Move:1;”	Starts accelerometer data stream.	String, that always starts with ‘G’, fol- lowed by 3 16-bit little-endian numbers e.g. “GEF008312ED00”
“Stop- Move:1;”	Stops accelerometer data stream	“OK;”
“Ro- tate- Change;”	Changes the direction of rotation for the stimulator on the Nora toy.	“OK;”
“Vi- brate:x;”	Sets vibration level for toy. Range seems to be 0-20.	“OK;”
“Ro- tate:x;”	Sets rotation speed for Nora toy. Range seems to be 0-20.	“OK;”
“Air:Level:x;”	Sets absolute air level for Max toy. Range seems to be 0-5;	“OK;”
“Air:In:x;”	Sets relative inflation level, i.e. if currently inflation level is 3, and “Air:In:1” is sent, will inflate to 4	“OK;”
“Air:Out:x;”	Sets relative deflation level, i.e. if currently inflation level is 3, and “Air:Out:1” is sent, will deflate to 2	“OK;”

lovesense is a library for controlling Lovense sex toys, such as the Max, Nora, and Lush. The library allows users to control all aspects of the toy (vibration/rotation/inflation, depending on the toy), as well as retrieving information like device type, status, battery level, and accelerometer readings.

The library is currently available in the following languages:

- [Python](#)
- [Max/MSP](#)
- [Rust \(with C Headers\)](#)
- [Javascript/Node.js](#)

If you need an implementation in a language not currently supported by lovesense, please file an issue on the github tracker of the relevant project.

Please note that this project has no direct relation to the Lovense company. These drivers have been developed/supported by the open source community. Lovense has had no direct participation in this project and most likely will not be able to answer questions or provide support for any of the Lovesense drivers.

If you require commercial support for programming for Lovense products, it is recommended you go through the [Official Lovense Developer Program](#).

CHAPTER 2

Indices and tables

- `genindex`
- `modindex`
- `search`